




FIRESIDE REALWOOD-FRW 18

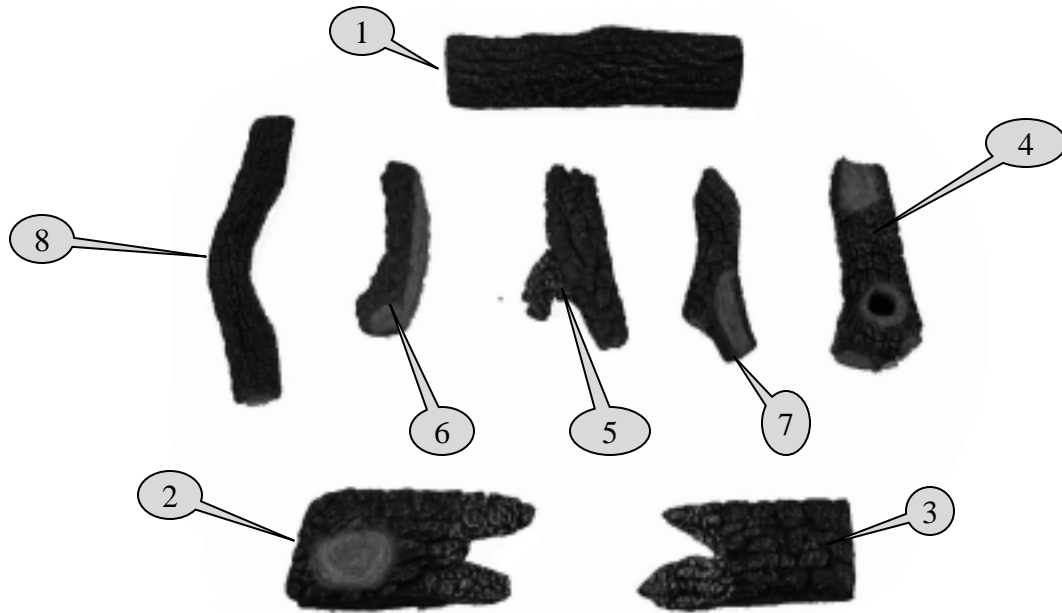


Step 1

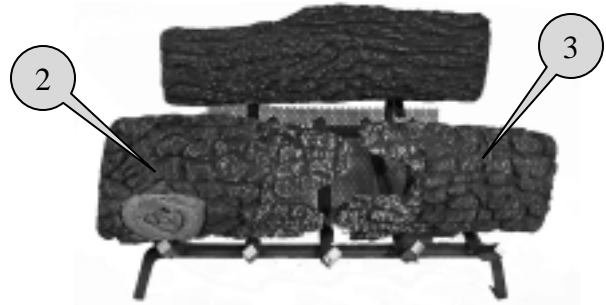

Step 2

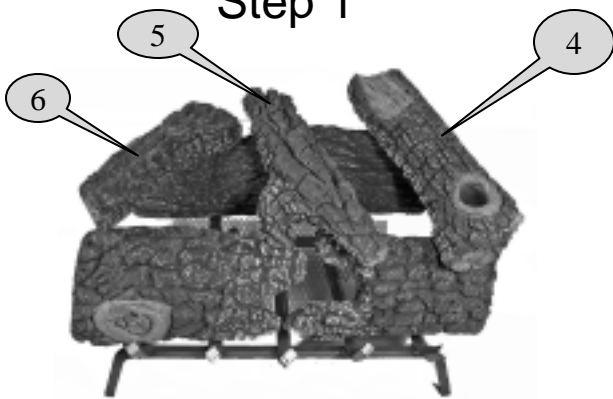

Step 3

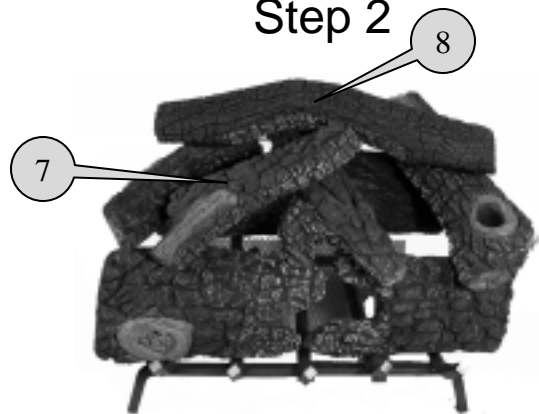

Step 4

Important: Do not discard, keep with your Installation Manual

Pt No 4004-305